




WIRE ROPE LUBRICATOR & CLEANER

USER MANUAL

1. Open the box of Wire Rope Lubricator, remove the tray with the parts (Scraper Plates, Rubber Seals, Helix Groove Cleaners and retaining ratchet straps).



2. Take out Air operated Greasing pump from box. Remove locking nut in order to release follower plate with spring.

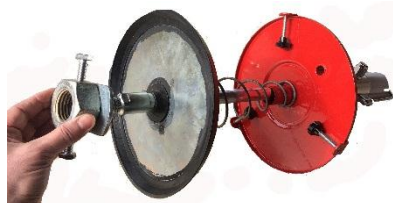


3. Connect air regulator to the air inlet of the pump followed by the air hose, connect also the grease hose with the swivel end to the pump outlet, place thump screws to the cover and you are ready to place pump in the drum with the grease




4. Open Wire Rope Lubricator Collar and place the rubber seals you choose according to your needs.



5. Choose the appropriate scrapers, should be the same size as the rubber seals.

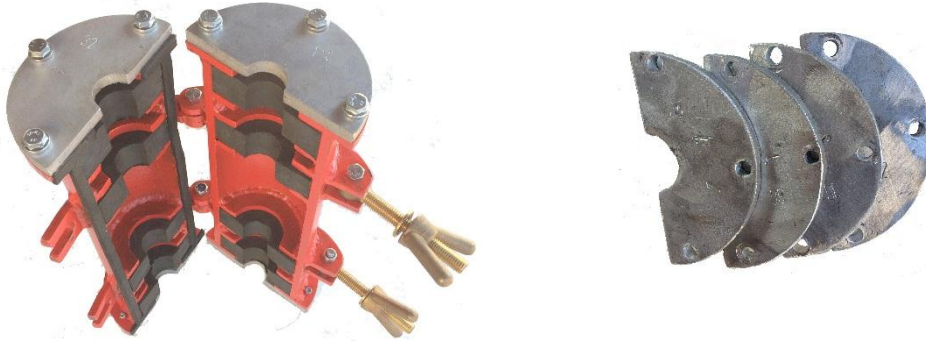

6. Place the Helix Groove Cleaner before the lubricator collar as it is shown on the picture.

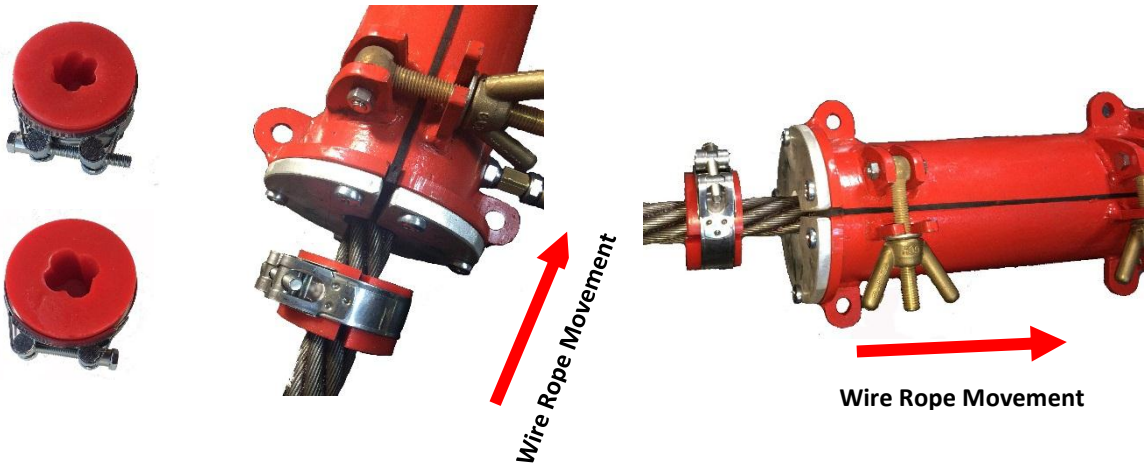

7. Use supplied Retaining ratchet straps and shackles to anchor Lubricating collar to a fixed point and you are ready to start using HJ Wire Rope Lubricating and Cleaning assembly.

